



PRESTIGIO NOBILE

e-Book Reader PER3274B

Table of Contents

Disclaimer	3
Introduction	3
Package Content	4
Getting Started	5
Charging the Reader	6
Power On/Off, Reset Device, Insert MicroSD	7
Main Menu	8
Browser History	9
Ebooks	11
Music	13
Video	16
Photo	18
Record	19
Explorer	20
Radio	21
Settings	22
Calendar	25
Search	27
User Manual	28
Notepad	29
Calculator	30
Games	31
Magic Makeup	32
Product Specifications	33
Technical Support and Warranty Information	33
Copyright and Trademark Notice	34

Disclaimer

All the information, design and specifications contained in this manual were at the time of publication. However, as the product is under development and upgrading, the final device may have a slightly different appearance or modifications in functionality than presented in this manual.

Introduction

Prestigio Nobile PER3274B is an e-book reader with full color TFT display screen 19 cm (7") diagonal and resolution of 800*480.

PER3274B supports e-books encrypted with FB2, HTML, etc.

Support of 22 languages including English, Russian, Greek, Polish, German, etc.

Includes audio and video playback and a photo viewer.

 
4GB built in flash memory.

Inbuilt speakers.

Package Content

1. E-book Reader
2. USB cable
3. AC adapter
4. Quick Start Guide in multiple languages
5. International warranty card

Getting Started

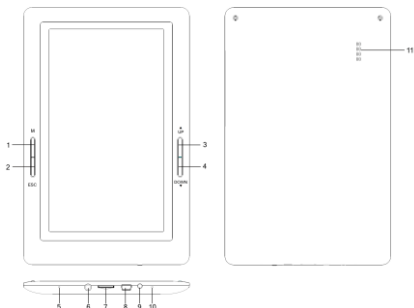



- | | | |
|-----------|---------------------------|---|
| 1 | Menu | Press the menu button to pop up the menu |
| 2 | ESC | Return to the previous option |
| 3 | UP | Turn to the previous page |
| 4 | DOWN | Skip to the next page |
| 5 | MIC | For audio recording |
| 6 | Earphone Jack | Connect to the earphones |
| 7 | Micro SD card slot | Insert micro SD storage card |
| 8 | USB port | Connect to the USB cable |
| 9 | Power button | Turn on/off the device |
| 10 | Reset | Reset the device by inserting a small pin into the hole |
| 11 | Speaker | |

Getting Started

 
Charging the Reader

You need to charge the Reader prior to using it for the first time or when battery power is low.

Note: *It's recommended to charge the battery for 4 hours before the first time use. Normally it takes approximately 3~4 hours to fully charge the device.*

Recharge the device as soon as possible when the battery is in low-power level shown as .  icon appears once the battery is fully charged.

You can charge the Reader by:



- Inserting Mini USB connector to the USB port on the device and connecting power adapter to wall socket for charging.
- Connecting the host PC USB port and the device with the included USB cable to start charging.

Note: *When charging through PC, you cannot operate the Reader. To operate the reader during charging, click the Safely Remove Hardware icon on your desktop with the Reader connected to PC. Click any button on the Reader to go from "USB Connection" screen.*

Switch the Reader to stand-by mode to speed up the charging process.

Getting Started

Power Reader On and Off

 
- Press and hold the [Power] button for 5-6 seconds to turn on Reader - it will automatically enter the main menu on **Home** screen after the start-up screen.
- It may take a few moments for reader to turn on and load the content.
- If Reader does not turn on, charging is required.
- To turn off Reader, press and hold [Power] button for 3-4 seconds.



Restoring to Factory Default Settings

Reset the device by pressing reset button when device fails to start up or function properly.

Using a micro SD Card (Not Included)



- Insert micro SD card into micro SD slot.

Main Menu

There are 2 pages on main menu by sliding left and right. It includes **Browser History, Ebooks, Music, Video, Photo, Record, Explorer, Radio, Settings, Calendar, Search, User Manual, Notepad, Calculator, Games, and Magic Makeup**. Press the corresponding icon to enter the desired section.




Main Menu: Browser History



Browser History





Ebooks viewed in the past will be displayed on the screen. Press the corresponding icon on the main menu to enter previously opened ebooks list.



- Press the title of the desired ebook to open it. Press the icon  to delete this file from history list.
- 1/360 displayed under the ebook tile shows the total pages of this ebook is 360 and your last reading page is 1.
- 2012-3-29 displayed under the ebook tile shows your last reading time of this ebook.

Note: Files that were saved on the MicroSD card will not be displayed in **History** list if the MicroSD card is removed.

Main Menu: Browser History

- Press the icon  to adjust the volume if you're playing background music.
- Press the icon  to adjust the screen brightness. There are 5 level brightness in total.
- Press the icon  to go back to the main menu.
- Press the icon  to go back to the previous page.

Note: *For reading instructions, please see below section **Ebooks**.*


Main Menu: Ebooks



Ebooks

Nobile PER3274B supports most of popular e-book formats, including PDF, EPUB, FB2, PDB, TXT(ANSI/UNICODE code), HTML,RTFWTXT.












Press corresponding icon on main menu to enter ebook list .

Press the icon  to get book cover mode display.



Main Menu: Ebooks

Choose the desired book to start reading.

Item	Description
Write comment	Press the icon  to write comment on the book.
Zoom in	Press the icon  to zoom in/out. Total 4 levels size.
Bookmark	Press the icon  to enter the operation of bookmark: save bookmark, load bookmark and delete bookmark. You can save the address of the current page and 5 items are available.
Go To Page	Press the icon  and write the desired page number, then press YES .
Page Turn Mode	Press the icon  to choose Auto Mode or Manual Mode .
Auto Mode	Press Auto Mode to set up the interval (10s, 20s, 30s, 45s and 60s) of page turn.
Brightness	Press the icon  or press M button to pop up submenu, then press Brightness. ; or press or the icon  on the top . Total 5 level brightness for choosing.
Rotation	Press the icon  or press M button to pop up submenu, press Rotation . 4 directions are available to rotate.
Mode	Press the icon  or press M button to pop up submenu, press Mode . There are 6 color mode of the font color and background color.
Music Playback	Press the icon  or press M button to pop up submenu, press Music Playback to play background music.
Select font	Press the icon  or press M button to pop up submenu, press Music Playback . Default font, Arial, Times New Roman and Droid Sans Fallback are available.

 
Main Menu: Music



Music

Press corresponding icon on main menu to enter **Music**. It supports MP3, WAV, FLAC, AAC, OGG, WMA (WMA lossless not supported) .

Note: *Music files saved on micro SD card are also displayed in the list.*

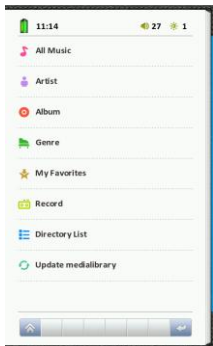

All music, Artist, Album, Genre, My favorites, Record, Directory List and Update media library are displayed.

Main Menu: Music



 



 

Item	Description
All music	List of all tracks.
Current Play	The current playing tracks.
Resume Play	The last played tracks.
Artist	The album list of artists.
Album	The track list of the album.
Genre	The artist list in the same genre.
My favorites	The favorite tracks list. Press  to add corresponding music into My favorites.
Record	The recorded files list. Play all recorded files from Record.
Directory list	Files list sorted by Flash and SD Card .
Updating media library	To update media library.

Main Menu: Music

Music Playback

Press **All music** / **current music** / **Resume music**, **Artist**, **Album**, **Genre**, **My favorites**, **Directory list**, or **Music Playback** while reading books to play the music. Press **Record** to play the audio files recorded by PER3274B.

Note: Music Playback while reading only plays the last played music. Leave music playback screen on Music without stop it will also get background music playing.

- Press  to set up music play order: list or random.
- Press  to change current playing music style. User (default), nor, rock, pop, classic, bass, jazz are available.
- Press  to have partial repeat of current playing music. Press once to get the begin point A and press again to get the end point B. Then music will repeatedly play from A to B. Press it again to stop this repeat.
- Press  to adjust the equalizer of the music by manual.
- Press  to the previous music and press  to the next one.
- Press  to pause the music playing, and press  to continue playing.



Main Menu: Video



Video

Press corresponding icon on main menu to enter **Video**. It supports 3GP, ASF, AVI, FLV, MOV, MP4, RM, RMVB(2mbps rmvb non -support real g2), VOB, WMV.








Main Menu: Video

On the playback screen, the following operations can be performed. The video orientation is set to **Horizontal** (left). (Default Settings)

1. Press  to pause the music playing, and press  to continue playing.



2. Press  to the previous music and press  to the next one.
3. Press  to jump forward/reward to a certain time. **h** for hour, **m** for minute.
4. Press  to go into/ out of full screen.
5. Press  to adjust volume or choose silent mode.
6. Press home icon or back icon to leave current video playback. There is indication to choose whether continue last playback when open this video again.





Main Menu: Photo



Photo

The device supports only the following picture formats: JPEG, GIF, BMP and PNG.
All other file formats will not be displayed on purpose.



- Press  to zoom in/out.
- Press  to go into/ out of full screen.
- Press  to rotate. 4 directions are available.
- Press  or press **M** button to choose **Auto Mode** or **Manual Mode**. 5 sec, 10 sec, 20sec are available to set in auto mode.

 
Note: Zoom in/out function only applies to .JPEG, .PNG and .BMP picture formats.


Main Menu: Record



Record

Press corresponding icon on main menu to enter record. It only can be saved as WAV format.

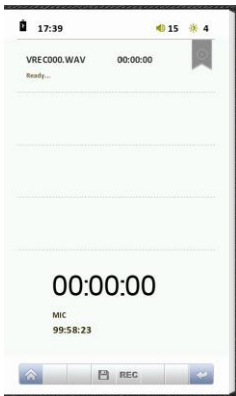

- Press **REC** to start recording. Be closer to the MIC to get a better quality recorded file.
- Press  to save current recording.

Note: 1. All recorded files will be displayed in **Music\ Record**.


2. All files recorder via outer **MIC** will be saved in file name begin with **VERC**; all files recorded via **FM radio** will be saved in file name begin with **FMRC**.

 
Main Menu: Explorer



Explorer

Files in **Flash** or **TF Card** will be displayed under Explorer. You can open all supported files from this directory.

Note: Only a single file but not the whole folder can be applied to delete while there is icon  appeared behind the file. .

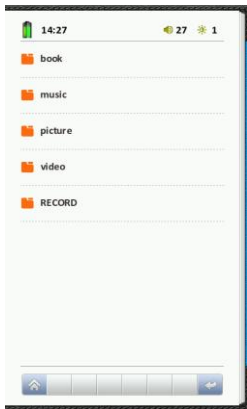

Main Menu: Radio



Radio

FM radio is supported by PER3274B. It will request to insert earphone once open.



- Press to get **Auto search** or **FM record**.
- **Auto search** will be 0.1MHz added each searching from 87. All searched channel shall be listed under FM1, FM2, FM3. Total 30 channels can be listed.
- Choose **FM record** to record and files shall be listed on **Music/ Record**.
- Press to delete the saved channel.
- Press to save the channel searched. Press the corresponding saved channel to open it.
- Press to get 0.1MHz less than current channel; press to get 0.1MHz more than current channel.
- Press to change to different area frequency. China/ Japan/ USA/ Europe/ Campus Radio are available.

Main Menu: Settings



Settings

Turn to the 2nd page of main menu by sliding on lower 1/3 area, Settings is displayed. Press the corresponding icon to enter settings. There are three parts under Settings : Display, Time, System.

In the **Settings** menu, you can configure the following settings.

Display

- **Backlight**

Set the backlight time by this section. There are choices 5sec, 10 sec, 15sec, 20sec, 30sec and always on. Backlight will shut down after the time period you set. If always on is set, backlight will not shut down itself. Press anywhere on screen to turn on the backlight and continue to use the device.

- **Brightness**

Adjust the brightness of the screen. There are five levels in total. Brightness can also be set on each interface with an icon .

Time

- **Automatic shutdown time**

Main Menu: Settings

Set the automatic shutdown time and device will shut down if no operation done during this period of time. 3 minutes, 5 minutes, 10 minutes, 15 minutes, 20 minutes and disable are available.

- **Key Lock Time**

Set the key lock time and buttons and touch screen shall not work unless pressing the power button to unlock it. There are 10sec, 30sec, 5 minutes, 10 minutes and disable for choice.

- **Sleep time**

Set the sleep time and device will shutdown if no operation during this period of time.

The above 3 settings shall help to save the power of your device.

- **Set time**

Set the time of the device. Hour/Minute/Year/Month/Date are displayed as HH/MM/YY/MM/DD.

System

- **Language**

Available options are English, Russian, Bulgarian, Czech, German, Estonian, Spanish, French, Greek, Croatian, Hungarian, Italian, Lithuanian, Latvian, Dutch, Polish, Romanian, Serbian, Swedish, Slovenian, Slovak, Ukrainian.

Main Menu: Settings

- **Restore default**

Restore the device to factory default settings.

- **System Information**

Display the technical information of the device.

- **Touch screen calibration**

Calibrate the touch screen.

Main Menu: Calendar












Calendar

Display the calendar in year, month, date and create memorandum to a certain time.



Main Menu: Calendar

- Press  to view all the written memorandums. After press this icon, all the written memorandums will be displayed and the icon turns gray. The icon  will turn dark and is available to choose. Screen will only display newly created memorandum today.
- Press  or  to decide whether change year/month/date on current calendar. Year or month or date will be red and it is allowed to change. On the above picture, user can change date since it is red.
- Press  or  to add or deduct year, month or date. If it is to change year and month, it will be one year or one month added or deducted from current year or month. If it is to change date, it will be one week added or deducted from current date. Press the date on calendar directly to change to either date on current month.
- Press the column "New Notandum" to create a new memorandum to current time.
- Press  to pop up keyboard while editing memorandum. *Currently only English and Russian keyboard are available.*
- Press  to save the current editing memorandum.
- Press  after each memorandum to delete it.

 
Main Menu: Search



Search

Search files in the device. You can search from All files, Music, Videos, Ebooks, Photos.

Note: Only files stored in internal memory can be searched.

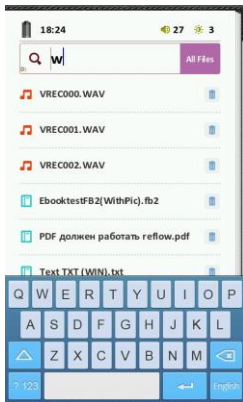

Main Menu: User Manual



User Manual

Included with the device are the Quick Start Guide and this PDF-format User Manual. Press the corresponding icon to enter this User Manual.

 
Note: Please refer to **Ebooks** part for more detailed instructions on reading this manual.




Main Menu: Notepad



Notepad

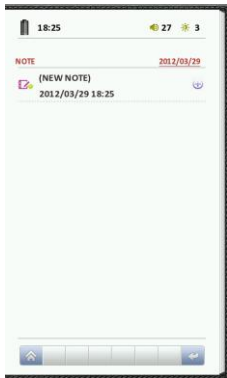Create and save notes to your device. All created notes shall be displayed on the first screen when enter notepad.



- Press  to pop up keyboard while editing memorandum. *Currently only English and Russian keyboard are available.*
- Press  to save the current editing memorandum.
- Press  after each memorandum to delete it.

 
Main Menu: Calculator



Calculator

Press the corresponding icon to use this PER3274B as a calculator.

Note: Only 9 numbers can be displayed on the window.

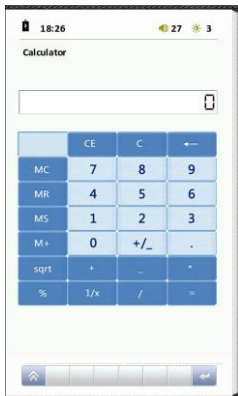

Main Menu: Games



Games

4 games installed in PER3274B: LLK Games, Mine sweeping, Slide and Stop Watch.

Main Menu: Magic Makeup



Magic Makeup

Press the corresponding icon to change the background of main menu. There are 5 background pictures installed for choosing.

Note: No user customized background is supported.



Specifications

Display	7" TFT
Resolution	800 x 480, 16:9
File Formats	Book: PDF, EPUB, FB2, TXT(ANSI/UNICODE Code), MOBI, HTML, PDB, RTF, WTX
	Music: MP3, WMA, FLAC, AAC, OGG, WAV
	Video: WMV, RM, AVI, RMVB, 3GP, FLV, MP4, DAT, VOB, MPG, MPEG, MKV (2mbps rmvb non -support real g2.)
	Photo: JPEG, BMP, GIF
Storage Temperature	Humidity 5% ~ 95%, -20°C ~ 50°C
Operating Temperature	Humidity 5% ~ 95%, 0°C ~ 40°C
External Storage	micro SD card, up to 32GB
Power source	USB connected DC 5V
Battery	Built-in Lithium Battery, 2000 mAh
Dimensions	197.5 mm x 127 mm x 10.2mm (L x W x H)
Weight	308 g

Technical Support and Warranty Information

Please refer to www.prestigio.com for technical support and included warranty card for warranty information.

Copyright and Trademark Notice

The content of this device, including logos, graphic, sounds, images, elements of design, software embodied in this product and documentation (manuals, illustrations, related documents, etc.) are the copyrighted works and could not be copied, modified or distributed in whole or in part without permission of the respective copyright holders.

The "Prestigio" trademark and "Prestigio" logos are owned by Prestigio Plaza Limited. Other trademarks are property of their lawful owners.

All pre-loaded software components and individual programs contained in the Product are licensed and not sold. They are licensed either under GNU General Public License or under the terms of the relevant software licence accompanying each particular software or component.

Those programs and software components that are distributed under the terms of GNU General Public License you could redistribute and modify them under the terms of the applicable GNU General Public License as published by the Free Software Foundation. For details of the license please see <http://www.gnu.org/licenses/>

Copyright © 2007 Free Software Foundation, Inc. <http://fsf.org/> 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA. The Source code for such programs will be provided by Prestigio Plaza Limited upon request.

This software is distributed in the hope that it will be useful, but PROVIDED ON "AS IS" BASIS, WITHOUT ANY WARRANTY, expressed or implied; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE, satisfactory quality (including errors-free or conformity to standards) or non-infringement of the third parties intellectual property rights. Neither Prestigio Plaza Limited nor any of the authors and distributors of the software and components included into this Product IS liable for any damages, including incidental or consequential damages, arising out of its use.